




Garden Master Sheds

LOCKING T HANDLE ASSEMBLY INSTRUCTIONS


Please read these instructions in conjunction with your standard shed instructions

1. Handle base can be mounted vertically or horizontally.
2. Use templates to mark out and drill holes for mounting - Rear fix bases need 6mm holes for bolts. Drill 12mm holes for shaft to go through. A stepped drill works well for panel steel. (Refer to pic 1-2 below).
3. Ensure handle is close enough to edge of door so latch reaches behind door frame. Also check that handle will clear any internal brace on the door.
4. Fit handle with fasteners Rivets/Screws provided. See Cover pie.
5. For Garden Shed Kits - fit interior latch arm and adjust to suit.

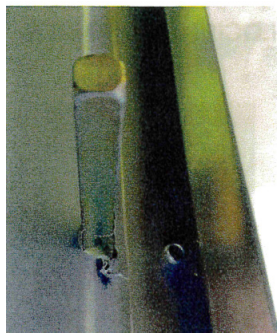

PIC 1:

Drill the 12mm hole in the line between the rib and pan as above.

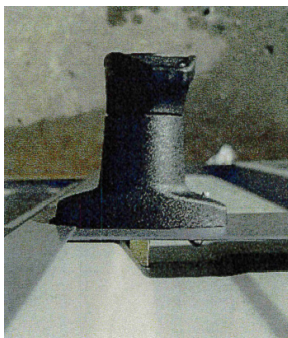

PIC 2:

See the position of the shaft above

**Two 6mm dia. holes for front fix
or 5 and 8mm holes for rear fix base**

