









ASSEMBLY INSTRUCTIONS

MEDIUM SLIDING DOOR

Please read these instructions in conjunction with your standard shed instructions.

COMPONENTS CHECKLIST

Please check the parts carefully and advise immediately if any are damaged or missing.

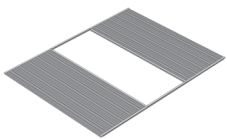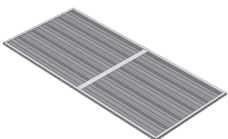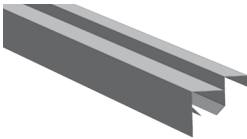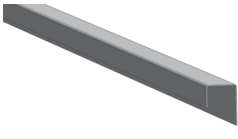A 1 x shed front assembly 	B 1 x door 	C 1 x top track 	D 1 x bottom track 
E 2 x 100mm bottom door rails 	F 2 x wheel kit 	G 1 x slide bolt 	H 2 x door stop kit 

STEP ONE: FRONT WALL

1. To the shed front assembly **A** slide the top track **C** down over the top channel of the front assembly. Place the bottom track **D** so the long edge sits against the bottom channel of the front assembly and flush with the bottom.
2. Top track: Align with the edge of the left or right door opening, depending on which side you want your door to open. Rivet into place with four rivets, into the top channel.
3. Bottom track: Rivet into place with six rivets evenly spaced.

YOU WILL NEED:

A 1 x shed front assembly

C 1 x top track

D 1 x bottom track

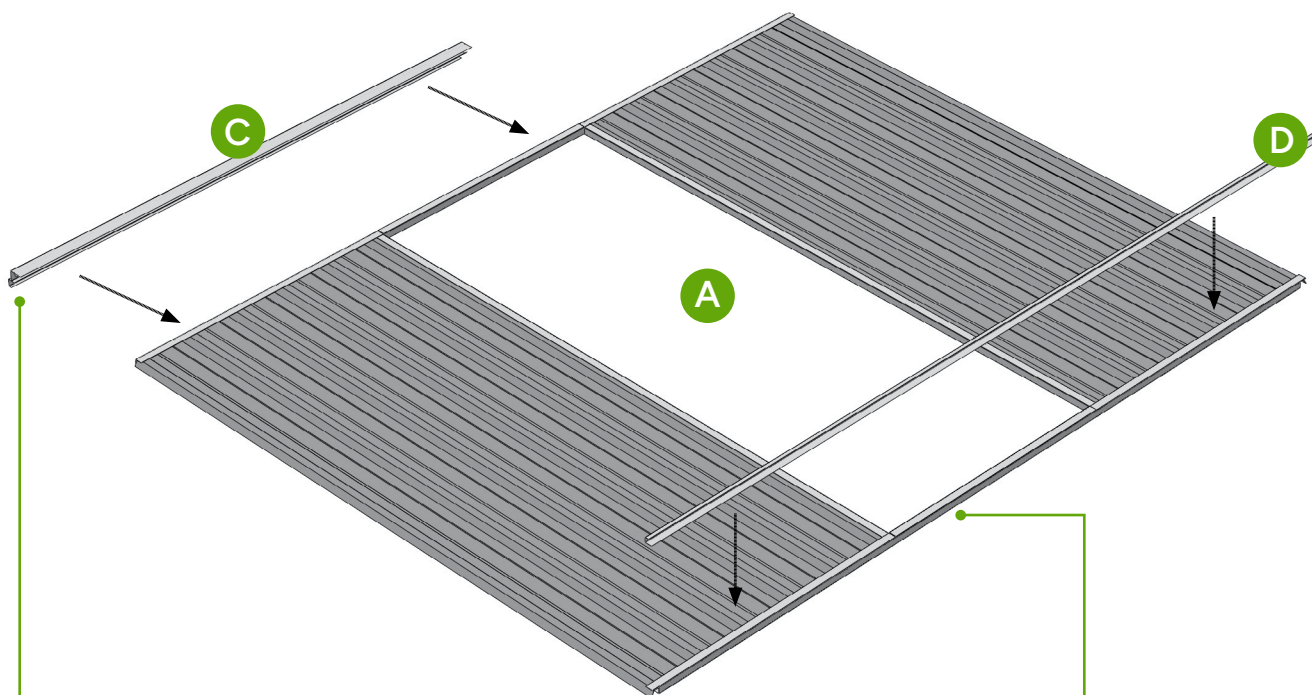


DIAGRAM 1

Fix with four rivets to the inside of the top channel and into the wall sheets.

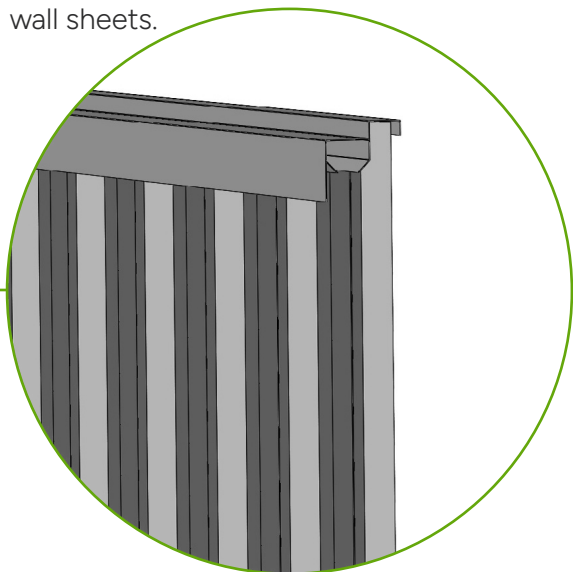


DIAGRAM 2

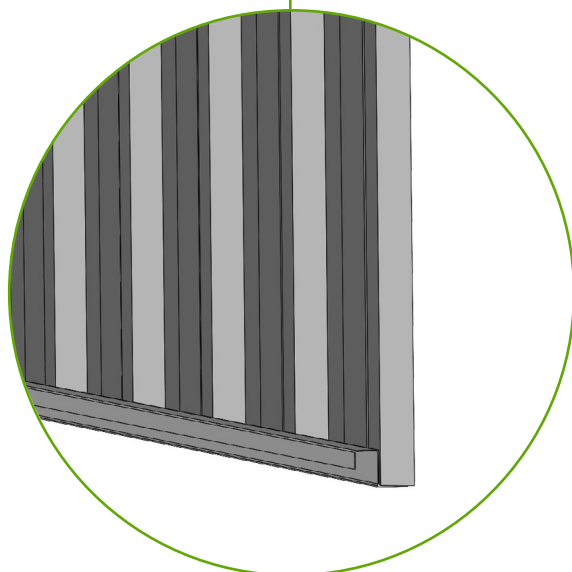


DIAGRAM 3

STEP TWO: FITTING WHEELS

1. Drill a 7mm hole at each end of the top channel of the **B** doors on the 2nd rib approximately 170mm in from the side (see diagram 3).
2. Attach a wheel **F** to each end of the door by first inserting the cap screw up underneath through the hole. Next place the spring washer onto the cap screw then use the nut to tighten. (see diagram 4).
3. Rotate the wheel clockwise or anti-clockwise to raise or lower the door to the required height.

YOU WILL NEED:

B 1 x door

F 2 x wheel kit

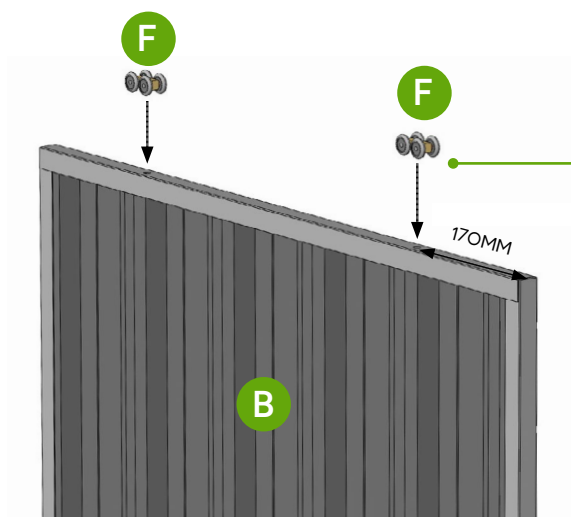


DIAGRAM 4

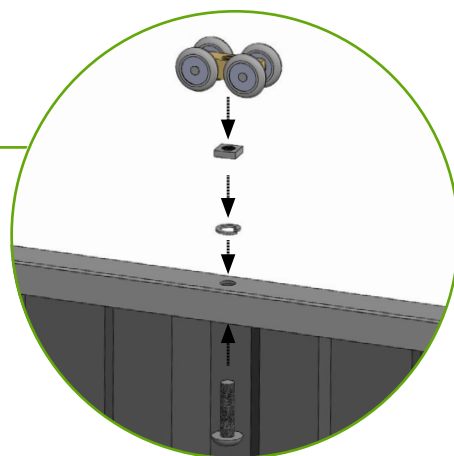


DIAGRAM 5

STEP TWO: FITTING WHEELS

1. Attach the two bottom door rails **E** to the bottom of the back of the door **B** through the bottom door channel. Rivet to the channel. (see diagram 7).

YOU WILL NEED:

B 1 x door

E 2 x 100mm
bottom door rails

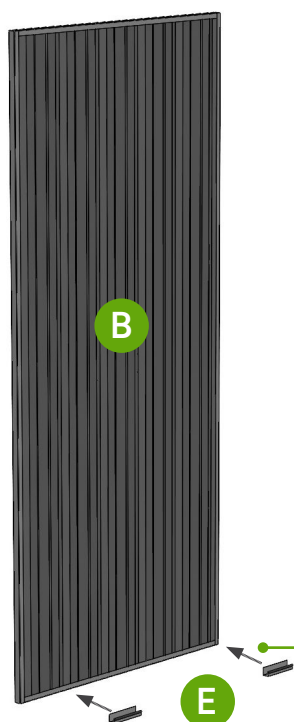


DIAGRAM 6

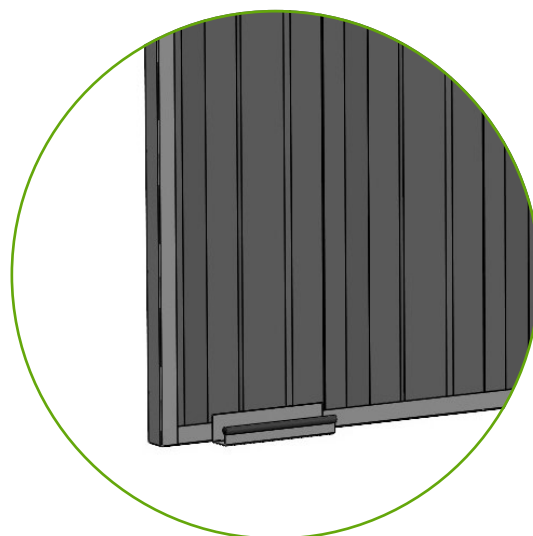


DIAGRAM 7

STEP FOUR: FIT DOOR

1. Pick up the door **B** (you may need a set of helping hands here). Slide the wheels on the top of the door into the channel on the top rail (see diagram 8).
2. Ensure that the bottom door rails **E** are sitting under the bottom track **D** (see diagram 9).

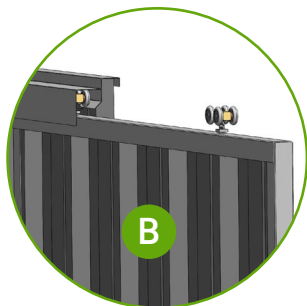


DIAGRAM 8

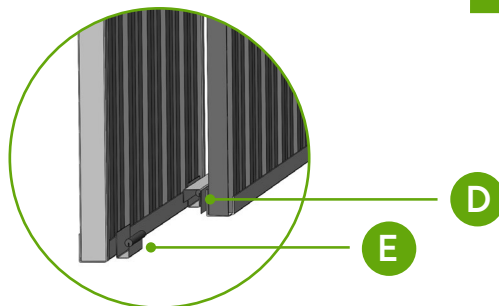


DIAGRAM 9

YOU WILL NEED:

B 1 x door

QUICK TIP!

You may need to remove the door and adjust the wheels to ensure that the fit is as tight as possible. This will reduce rattling in high wind.

STEP FIVE: FIT SLIDE BOLT

1. Attach the slide bolt **G** flush with the top of the door **B** (see diagram 10)
2. Slide the door closed. Raise the bolt and make a mark in the track slot **C**. Drill a 10mm hole on the mark for the bolt to go through (see diagram 11).

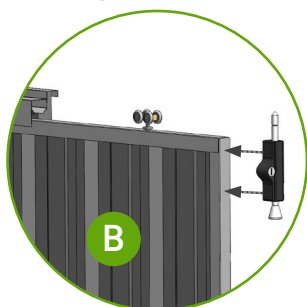


DIAGRAM 10

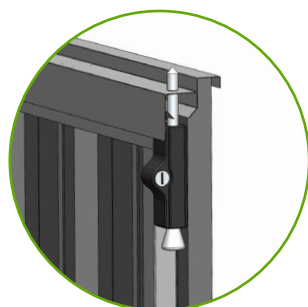


DIAGRAM 11

YOU WILL NEED:

B 1 x door

G 1 x slide bolt

QUICK TIP!

Fix the bolt to the left or right side of the door depending on which way you have chosen your door to open and close.

STEP TWO: FIT DOOR STOPS

1. Tighten the door stop screws until there is just enough of a gap to slide into the top track (see diagram 13). Position the door stops where you would like your door to stop when open, (see diagram 12). tighten the screw so it is firm in place.

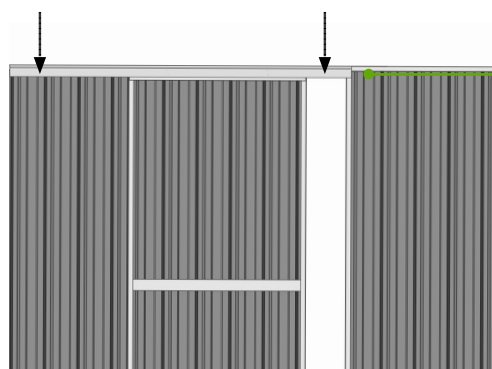


DIAGRAM 12

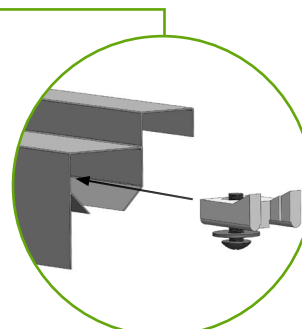


DIAGRAM 13

YOU WILL NEED:

C 1 x top track

H 2 x door stop kit

That's it! Your sliding door is now complete